


FERNCO STRONGBACK RC SERIES REPAIR/RECONNECTION COUPLING OR ROMAC COUPLING.

NOTES:

1. IF SEWER LATERAL IS DAMAGED OR HAS TO BE RELOCATED DURING CONSTRUCTION, RELOCATE/REPAIR SEWER PIPE AND RECONNECT USING A FERNCO RC SERIES STRONGBACK COUPLING OR ROMAC COUPLING.
2. A CONCRETE/PVC ADAPTER SHALL BE USED TO CONNECT PVC TO CONCRETE.
3. INSPECTION OF WORK IS REQUIRED AND MUST BE APPROVED BY THE ENGINEERING DEPARTMENT.
4. BORING OF SERVICES WITHIN RIGHT OF WAY IS NOT ALLOWED.
5. ALL SIDE SEWER PIPE BELLS AND FITTINGS SHALL BE RUBBER GASKETED.

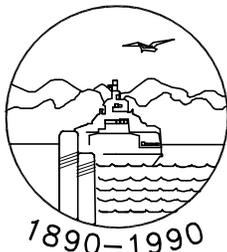

CITY OF EDMONDS

REVISIONS	
APPROVED BY	DATE
D. GEBERT	01/28/04
D. GEBERT	06/27/05
R. ENGLISH	2/2/15

STANDARD DETAIL		
SIDE SEWER RELOCATION/REPAIR		
DATE	SCALE	DWG NO.
7/24/01	NTS	E6.3